
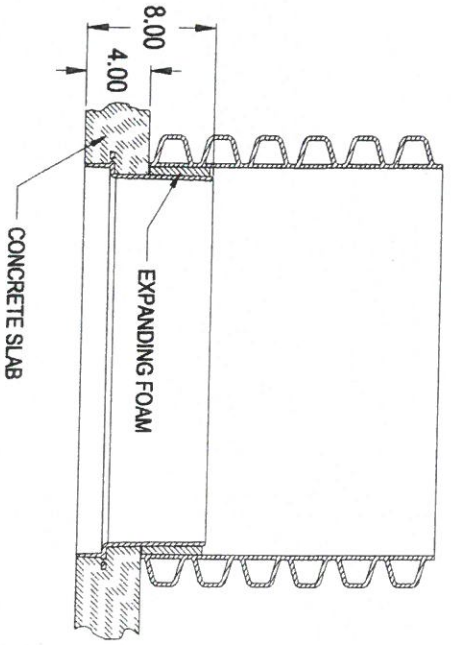



EXPANDING FOAM



- INSTALLATION INSTRUCTIONS FOR POLYLOKS
24" CAST IN PIPE ADAPTER RING # 3009-CFA
- 1 - IF RETROFITTING ON EXISTING POLYLOK PRODUCTS FASTEN CAST IN RING TO POLYLOK PRODUCT USING 8- #10 X 1 1/2" SS SCREWS
 - 2 - PLACE 24" CORRUGATED OR ANY OTHER 24" RIBBED PIPE OVER CAST IN PIPE ADAPTER RING
 - 3 - APPLY EXPANDING FOAM (POLY METHYLENE OR POLYURETHANE) INSIDE THE GAP BETWEEN PIPE AND CAST IN PIPE ADAPTER RING
 - 4 - ALLOW AMPLE TIME FOR FOAM TO SET PRIOR TO BACKFILLING (2 TO 3 HRS.)

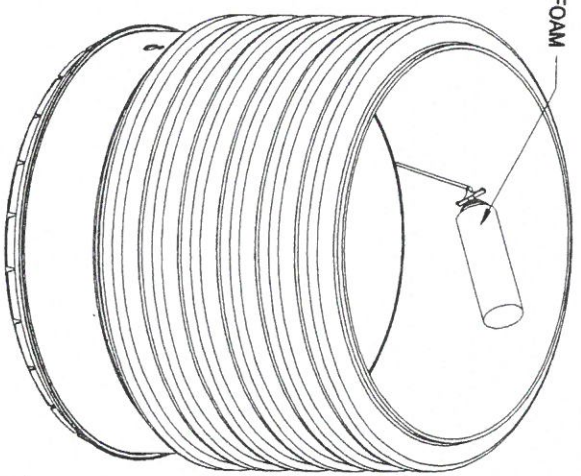

**POLYLOK 24" FLAT COVER
FOR RISERS AND
CORRUGATED PIPE -**

Our 24" Flat Cover fits Polylok Risers and Corrugated or ribbed pipe. These 24" flat covers are made of HDPE with the highest UV Protection on the market today. Every cover comes with a factory-installed gasket. These covers will withstand normal residential and light commercial traffic.

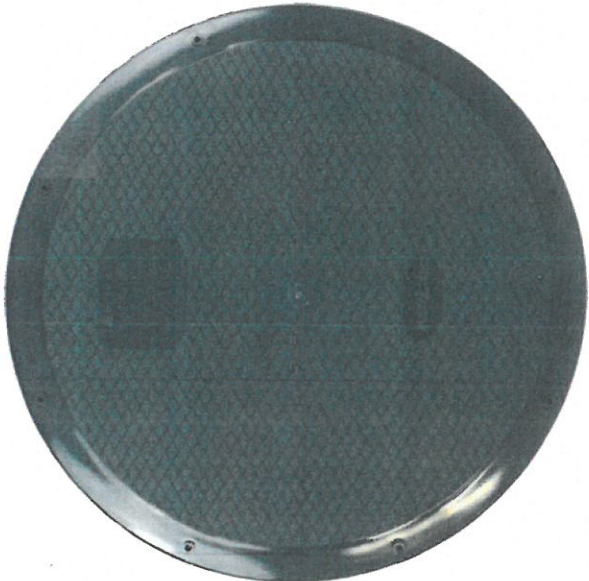

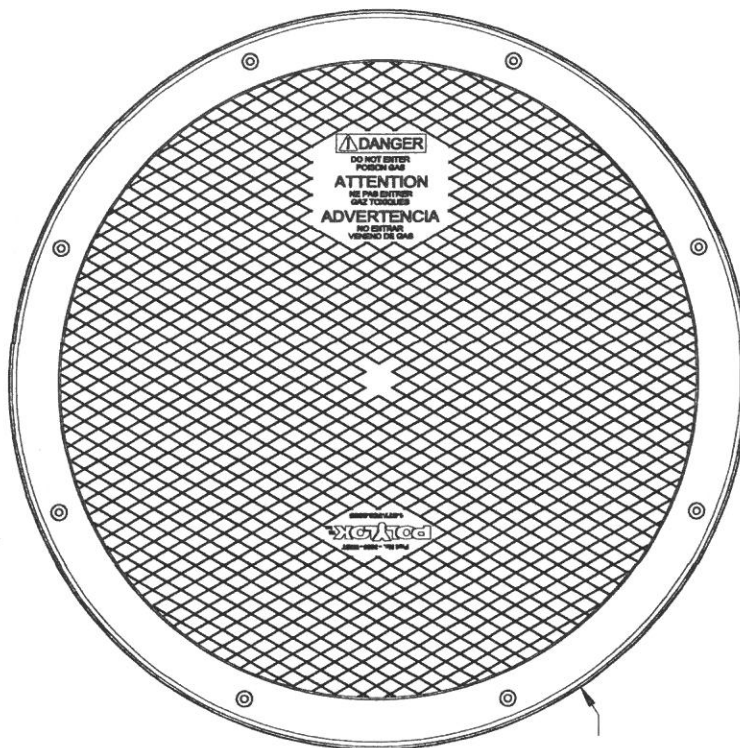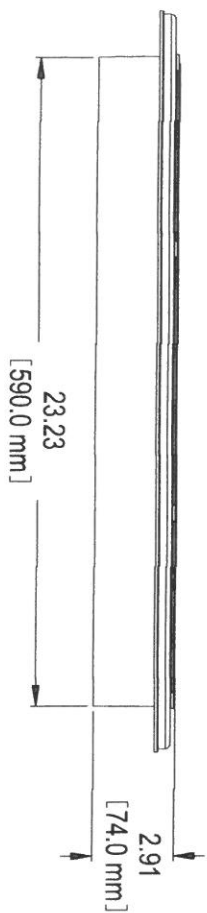

Ø26.52
[673.6 mm]

POLYLOK 24" FLAT COVER
PART NO. 3008-WEST
COLOR - DARK GREEN
MATERIAL - HDPE

